




WIRE ROPE PULLER MANUAL

OPERATING INSTRUCTIONS

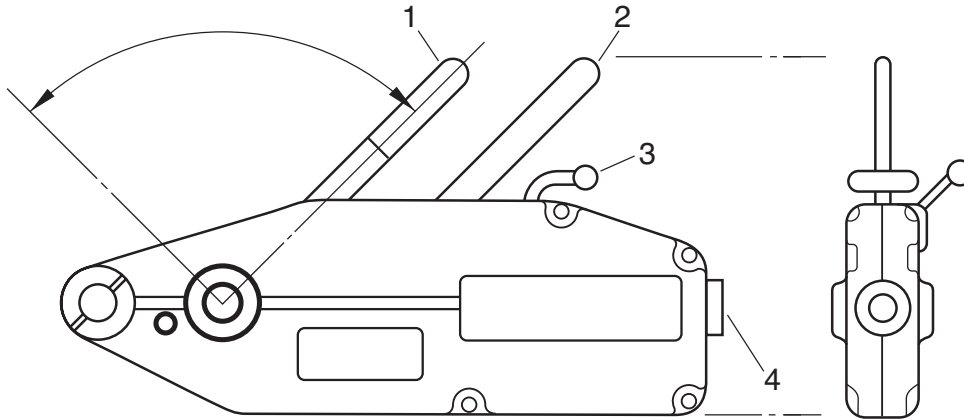

This unit comes with extra shear pins located in the handle. To release the jaws, hold reversing lever (2) and release lever (3) together with one hand, pull lever (1) forward slightly at the same time pushing (2) and (3) forward until release lever (3) slips into notched position in casing. Insert the tapered end of the wire rope into the rope entry (4) and push through until it extends through the outlet. The wire rope end may have to be pushed up or down slightly to clear the hook or fitting at forward end.

Wire Rope:

MAGNA's wire rope is sold separately in 33 and 65 foot lengths with hook attached at one end. The class of wire rope used is 6x19, wire core and galvanized, including 6x21, 6x25 and 6x26. The wire rope used by our factory is 6x25. The end to be inserted into the unit should be tapered and burned for easy use.

Pull the wire rope through by hand to take up the slack to the load and ensure that the exit is not obstructed. Push the release lever (3) down, it will spring back into original position. The jaws are now closed on the wire rope. Place the telescopic handle on either (1) or (2) depending upon whether forward or reverse action is required, and crank the operating lever forward and backward evenly. Return the release lever to "release" position when not in use.

⚠ WARNING

- DO NOT USE TO LIFT OR SUSPEND PERSONNEL. THIS UNIT IS NOT MAN-RATED.
- Remove dirt and grit from wire rope and winch.
- Do not use wire rope that is kinked or damaged.
- Keep inside parts properly lubricated with oil.